

MENU <b>1</b> 1,8 MHz	STEP <b>2</b> 3,5 MHz	MEMORY <b>3</b> 7 MHz	VFO → <b>A</b> 50 MHz
LSB <b>4</b> 10 MHz	USB <b>5</b> 14 MHz	CW <b>6</b> 18 MHz	FSK → <b>B</b> 144 MHz
<< BAND <b>7</b> 21 MHz	CROSS <b>8</b> 24 MHz	BAND >> <b>9</b> 28 MHz	PTT <b>Esc</b> GEN
RIT	BAND <b>0</b> FREQ	SPLIT	

MENU <b>1</b> 1,8 MHz	STEP <b>2</b> 3,5 MHz	MEMORY <b>3</b> 7 MHz	VFO → <b>A</b> 50 MHz
LSB <b>4</b> 10 MHz	USB <b>5</b> 14 MHz	CW <b>6</b> 18 MHz	FSK → <b>B</b> 144 MHz
<< BAND <b>7</b> 21 MHz	CROSS <b>8</b> 24 MHz	BAND >> <b>9</b> 28 MHz	PTT <b>Esc</b> GEN
RIT	BAND <b>0</b> FREQ	SPLIT	